

# KARTANO UP

-20 ... 35 °C

IP44






-0

CE



VALAISIN | ARMATUR | LUMINAIRE

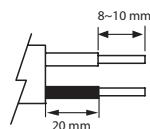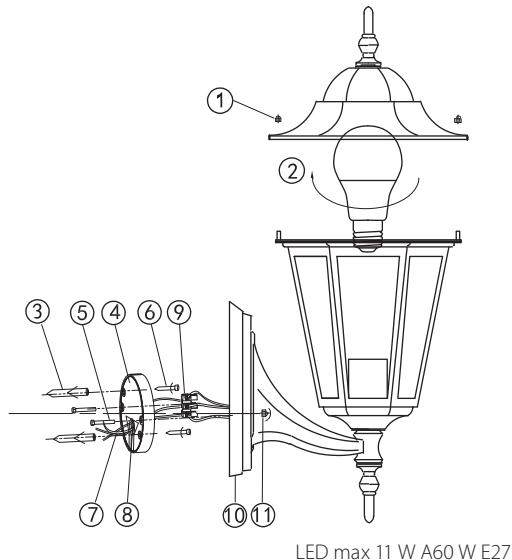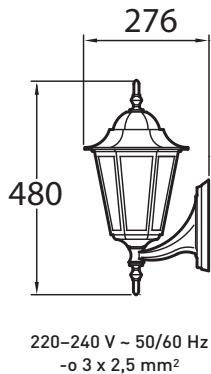

Valaisimen saa asentaa vain sähköalan ammattilainen. Käytä ainostaan syöttöjännitettä ja taajuutta joka on merkitty valaisimeen/liitäntälaitteeseen. Kytkie virta pois päältä ennen asennusta tai huoltoa. Tämä asennusohje on säilytettävä ja sen on oltava käytössä asennuksessa ja huollossa.

Vi rekommenderar att installationen görs av en behörig elektriker. Använd endast driftspänning och frekvens som är märkt på armaturen/förkopplingsdonet. Bryt av stömmen för installation eller service. Denna monteringsanvisning bör sparas och finnas tillgänglig vid installation eller framtida service.

Only a professional electrician is allowed to do the installation. Use only rated voltage and frequency as marked in the fixture/driver. Switch off the current before installation or service. This mounting instruction must be kept available during installation and for future maintenance.

# AIRAM

Airam Electric Oy Ab, Sementtitehtaankatu 6, FI-04260 Kerava, Finland, [www.airam.fi](http://www.airam.fi)

2021.05.17